


HOW TO INSTALL THE BABACO TRUK-LOK III™, (REAR OF TRUCK)

- Remove truck J-hook from door.
- Place new lock and engage hook in floor opening.
- Raise the assembly so that the hook touches the bottom of the locking plate.
- The distance should be close to 1”
- Make sure that the lock handle is exactly vertical.
- Hold the assembly against the locking plate to ensure that it stays in the proper position.
- The door must be totally shut. Make sure the assembly is horizontal.
- Mark the location of the six mounting holes. Drill the two upper corner holes first using a 3/8” drill bit and then drill the t holes.
- Install the bolts. Use the washers and nuts inside and tighten securely.

NOTE: On rare occasions it may be necessary to enlarge/cut the floor opening on the left of right side of the locking plate, if the hook does not fully engage.

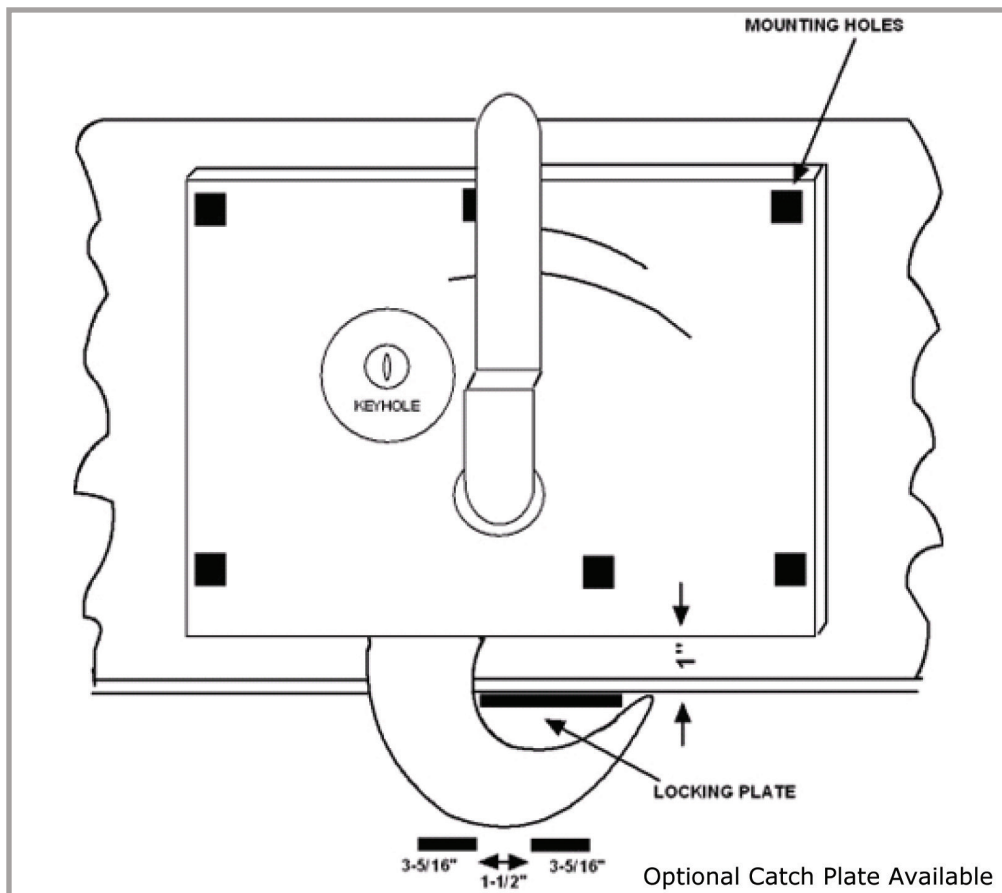

Includes

- 1) Main Lock Chassis
- 2) 2 Keys
- 3) Install Guide
- 4) Babaco® TRUK-LOK II® Sticker
- 5) Carriage Bolts



201-804-6300
sales@babaco.com
www.babaco.com

Follow us: [f](#) [t](#) [in](#) [You Tube](#)

We design products
with YOU in mind.

497 WASHINGTON AVE,
CARLSTADT NJ, 07072